

# Configure LoopCloud Connectivity

LoopEdge integrates seamlessly with LoopCloud to enable access to device data collection, management, and visualization via the cloud.

Use the following procedures to configure the connection between LoopEdge and LoopCloud:

- [DataHub Overview](#)
- [Prerequisites for LoopCloud Connectivity](#)
- [Activate a LoopEdge Device for LoopCloud Connectivity](#)
- [DataHub: Add a Cloud Connector](#)
- [DataHub: Modify a Cloud Connector](#)
- [DataHub: Add a Topic to a Cloud Connector](#)
- [Validate LoopCloud Connectivity](#)
- [DataHub Stats](#)



## Time Challenged?

For an overview of the steps described in these pages, view a video: [Review DataHub LoopCloud Connectivity Configuration Steps](#).