

# LoopEdge Deployment

The LoopEdge edge-level operating system seamlessly collects data from industrial devices (such as sensors and PLCs) and integrates the data into the cloud or into on-premise enterprise systems, enabling data processing at the edge.

- LoopEdge is an operating system that can run on a variety of commercially available industrial devices (Intel, ARM).
- The LoopEdge operating system installed on the device enables users to create custom flows of data from industrial devices connected to custom applications.
- Data processing applications are either developed by customers or can be downloaded from the marketplace.



- The device on which LoopEdge is installed often may be referred to as the LoopEdge gateway.
- To avoid confusion in this documentation, the term *gateway* is used to refer to the network gateway and the terms *Industrial PC (IPC)* and *LoopEdge device* are used interchangeably to refer to the device on which LoopEdge is installed.

Deployment details include:

- [Device Acquisition and Deployment](#)
- [LoopEdge Device Access](#)
- [LoopEdge Firmware Upgrades](#)

## Device Acquisition and Deployment


Litmus Automation offers several LoopEdge deployment options:

- **Pre-Installed on a device** - An end user purchases a device directly from Litmus Automation or via one of its distribution partners. LoopEdge software is pre-installed on the device. See [Log in to LoopEdge](#).
- **USB flash drive or ISO image installation** - See [Install LoopEdge from a USB Drive](#).

This network diagram illustrates where the LoopEdge device and software can be deployed. Once deployed, users can access the LoopEdge interface via a browser on the same network as LoopEdge. See [LoopEdge Device Access](#).



- The eth0 Ethernet interface is required for first-time bootup for DNS resolution.

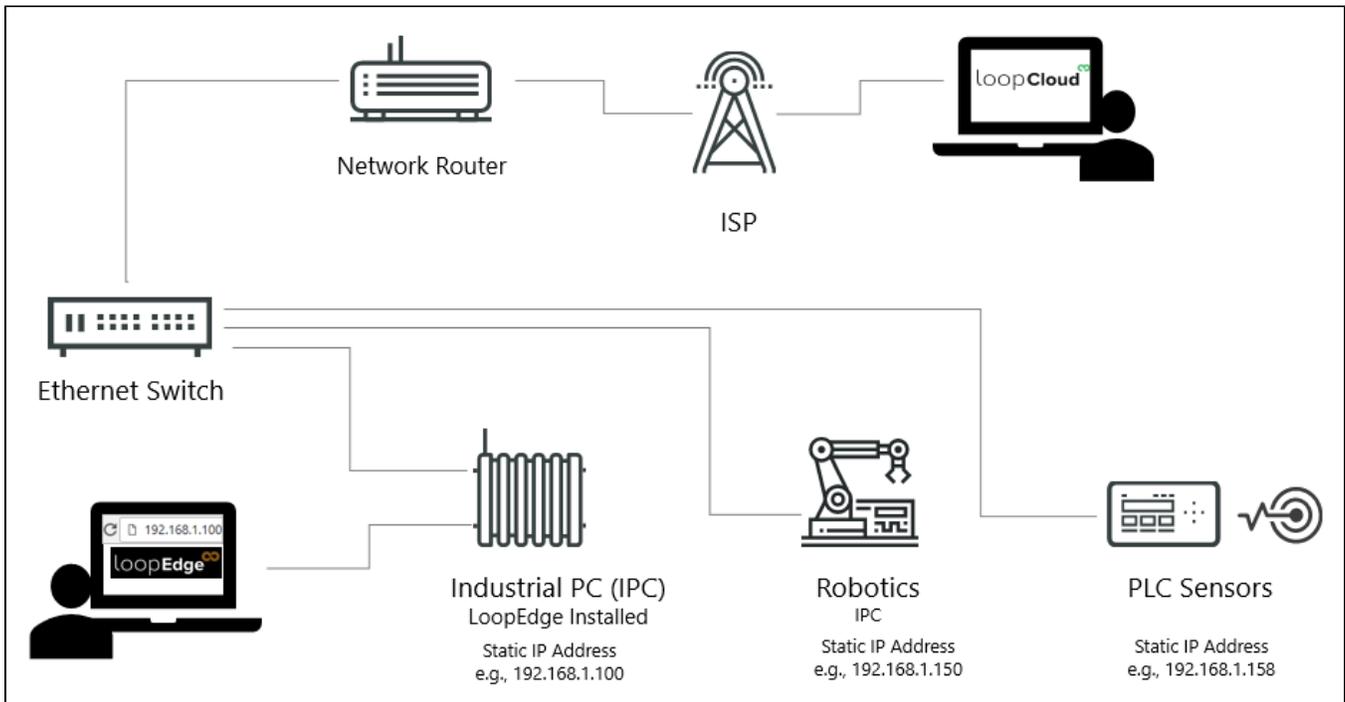

## LoopEdge Device Access

1. Log in to the the LoopEdge device via a browser on the same network as the LoopEdge device using the steps listed in [Log in to LoopEdge](#).
  - a. LoopEdge can be configured for remote access. See [Remote Access to LoopEdge](#).
  - b. LoopEdge can be accessed via the [LoopEdge Terminal User Interface](#).
2. Explore some of the LoopEdge features:
  - [LoopEdge Getting Started Guide](#)
  - [Configure LoopEdge DeviceHub](#)
  - [Configure LoopCloud Connectivity](#)

## LoopEdge Firmware Upgrades

To upgrade the LoopEdge firmware, see the instructions on the [Device Reboot & Upgrade](#) page.