

Rockwell FlexLogix

Refer to these sections for details:

- [Supported Series](#)
- [PLC Connection Settings](#)
- [PLC Configuration](#)
- [LoopEdge DeviceHub Configuration](#)
- [Device Addresses](#)

Supported Series

Supported Series: Rockwell ControlLogix, CompactLogix, FlexLogix CH0 DF1.

Website: <http://ab.rockwellautomation.com/>



Certain device drivers will *not* have a list of register names in the DeviceHub Add Tag form. These are *Free Tag* PLCs. For Free Tag requirements, see [Troubleshoot Device Connectivity Status](#).

PLC Connection Settings

Parameters	Recommended	Options	Notes
PLC Type	Rockwell EtherNet/IP (FlexLogix)		
PLC Interface	Ethernet		
Port #	44818		
PLC Station #	1		

PLC Configuration




Communication mode: DF1 No Handshake protocol 19200, None, 8, 1 (default). Error Check: BCC, Station Address: 1

LoopEdge DeviceHub Configuration

To configure DeviceHub for this Rockwell Allen-Bradley FlexLogix PLC:

1. **DeviceHub > Add Device**
Type: Allen-Bradley
Driver: AB FlexLogix

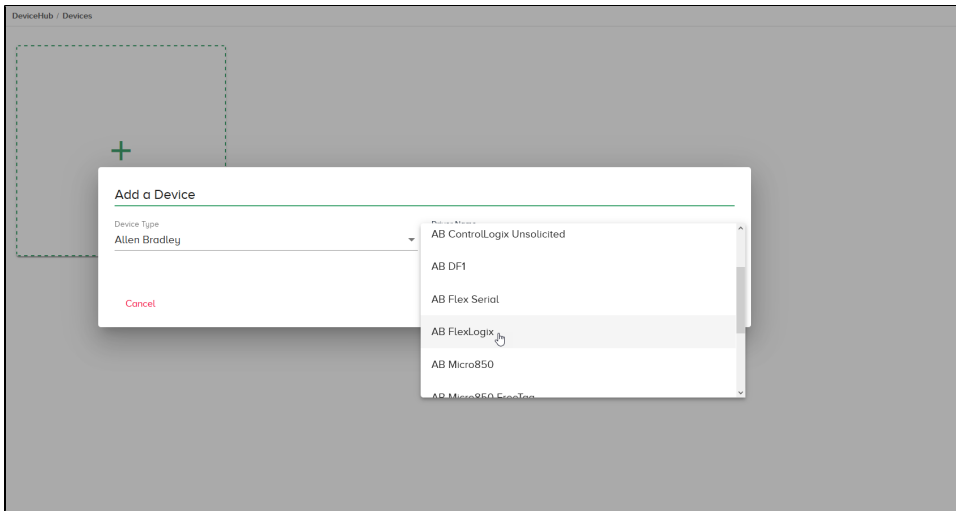

2. Enter details specific to your environment and click **AddDevice**

Add a Device

Device Type: **Allen Bradley** Driver Name: **AB FlexLogix**

Name: _____
This is a Device Name.

Description: **rockwell device**
This is a description of device.

Network Address: **192.168.01** Network Port: **44818**
This is a IP Address of device. This is a network port of device.

 Cancel

Device Addresses

PLC Data Type	Bit/Word	Data Format	Description
BOOL	Boolean	Bit object	
BitArray			
SINT			
INT	Integer	16-bit signed, ASCII	-32768 ~ 32767
DINT	Double Integer	32-bit signed	$-2^{31} \sim (2^{31} - 1)$
REAL	Single Precision Float	32-bit Float	IEEE 754